

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

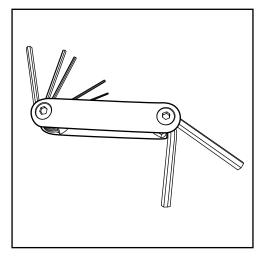


Hex Tool - Essential for Assembly

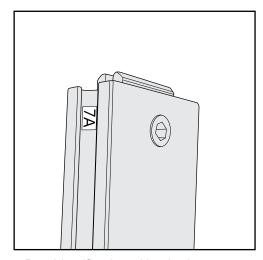


Part Identification - Numbering



MARNING

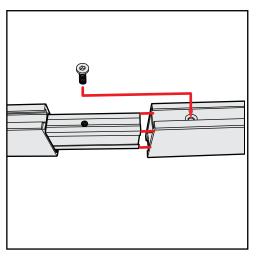

Spline Connection

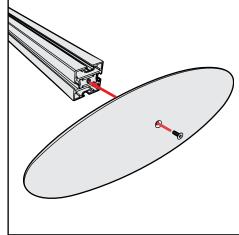

Base Plate & Extrusion Connection











LADDERS OR LIFTS MAY BE REQUIRED




ALL CONNECTIONS MUST BE TIGHTLY SECURED

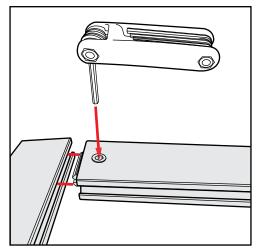


Extrusion & Lock Connection

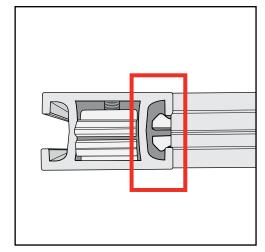


Engaged Lock

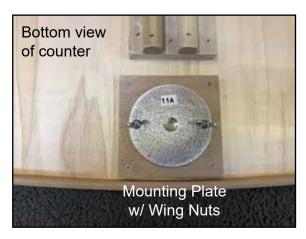


1) Mounting plate & wing nuts, in packed position.

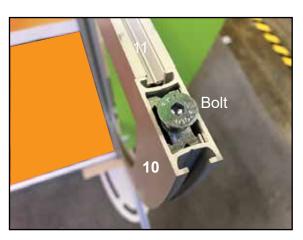


2) Mounting plate bolt in, packed position.

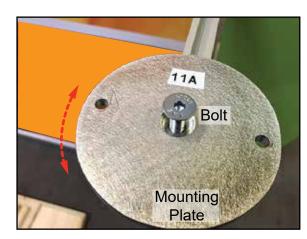


3) Place mounting plate onto [10] then tighten bolt, part way, allowing some rotation for final positioning.

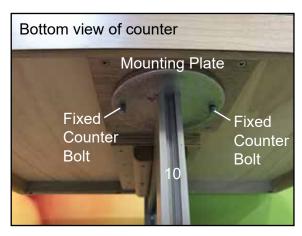

4) Place fixed counter bolts into mounting plate, then lift counter to re-tighten bolt.

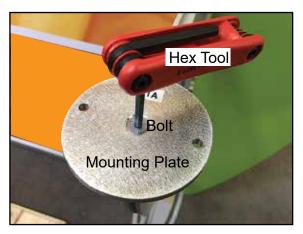


5) Tighten bolt, using hex tool, to secure.

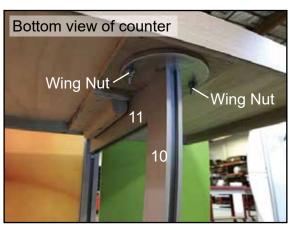

6) Place fixed counter bolts into mounting plate, then secure using wing nuts.

Completed Assembly




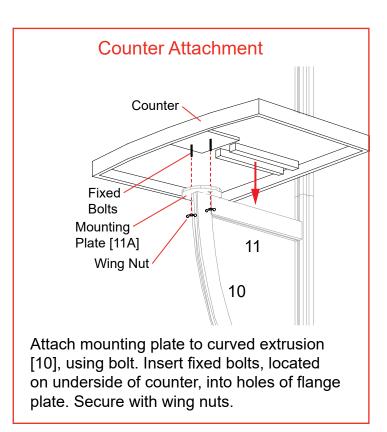



Keep mounting plate [11A] and wing nuts attached to counter, when packing.


Keep bolt attached to [10], when packing.


Top View of Each Level

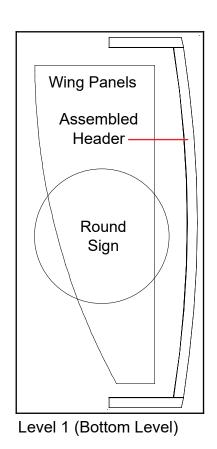

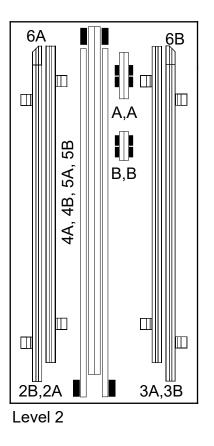

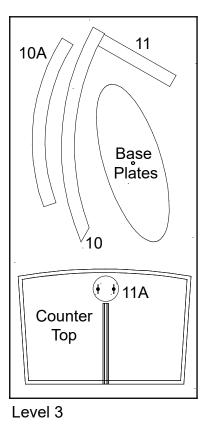

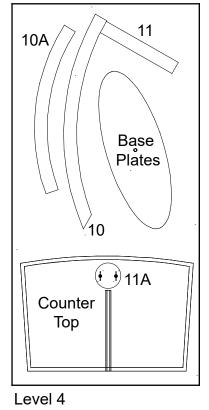

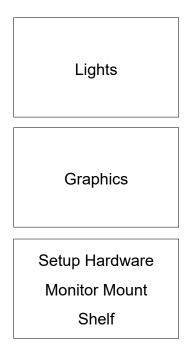


Order #XXXXX **Backwall Assembly**

Qty. Description 2 Base Plate 42" S40 Vertical Extrusion w/ A10 Clamps 2A,2B 1,1 42" S40 Vertical Extrusion w/ A10 Clamps 3A,3B 1,1 45" Z45 Horizontal Extrusion 5A,5B 1,1 45" Z45 Horizontal Extrusion 6A,6B 1,1 2.5" S40 Angle-Cut Vertical





Do not over tighten Knobs

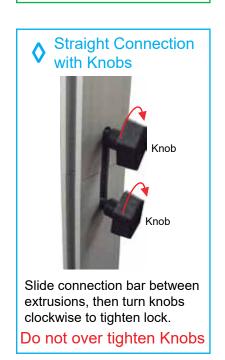

Steps:

- 1) Attach base plates [1] lower verticals [2A] and [3A], using bolts.
- 2) Connect verticals [2A to 2B] and [3A to 3B], using connection bars [B]. See Straight Connection with Knobs detail.
- 3) Connect horizontals [4A to 4B] and [5A to 5B], using connection bars [A]. See Straight Connection with Knobs detail.
- 4) Connect assemblies [2A/2B] and [3A/3B] with assemblies [4A/4B] and [5A/5B]. See Corner Connection with Knob detail.
- 5) Connect extrusions [6A to 2B] and [6B to 3B]. See 2.5"h Angle-Cut Vertical Attachment detail.
- 6) Attach graphic to Velcro on back of assembled Backwall.

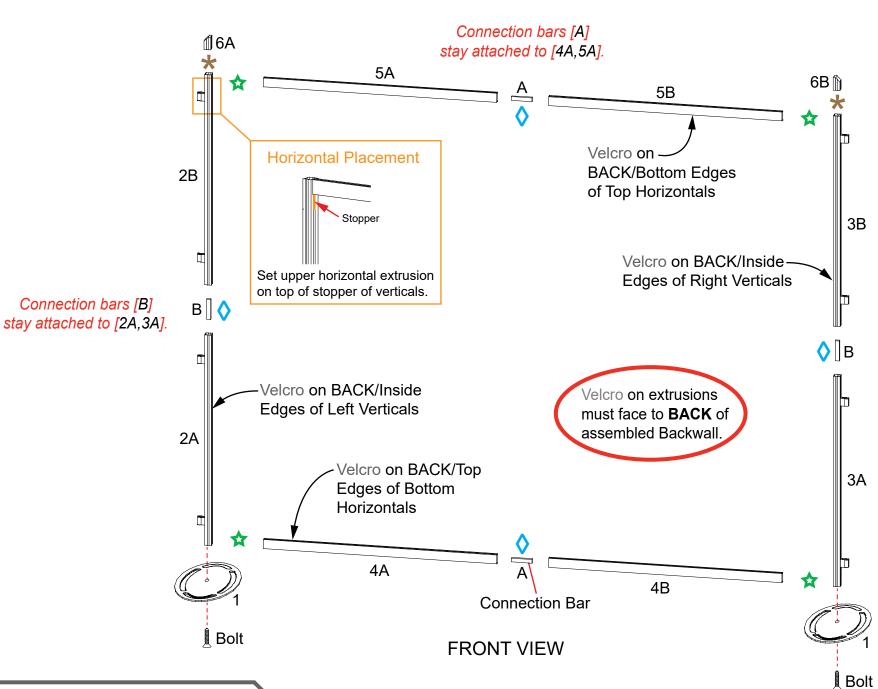


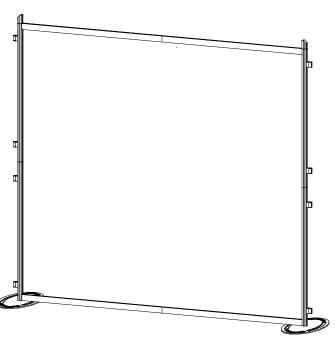

When Assembled

Keep extrusions [6A,6B] attached to [2B,3B].

Keep A10 clamps attached to [2A,2B,3A,3B].

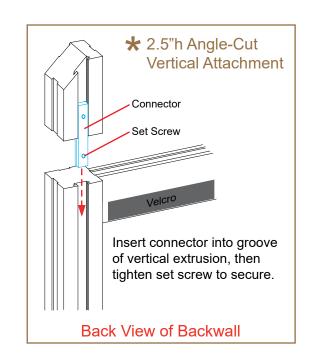

Connection bars [B]

Backwall Attachments Order #XXXXX

Steps: 1) Connect lights to top horizontal extrusions [5A/5B]. See Light Connection detail.

- 2) Attach assembled Header Frame and affix graphic using Velcro.
- 3) Attach extrusions [10/11] and shelf to verticals [2A] & [3A].
- 4) Attach support legs [10A] to curved extrusions [10].
- 5) Attach flange plates [11A] to top of curved extrusions [10], using bolts.
- 6) Attach counter tops to counter mounting plates [11A]. See Counter Assembly page.
- 7) Attach Wings to A10 clamps. See Clamp Attachment detail.
- 8) Attach Monitor Mount to vertical [2B]. See Monitor Mount Attachment detail.

9) Attach Sign to vertical extrusion [3B]. See Sign Attachment detail.


Item Description Header Frame 7/8/9 1/1/1 10 30.2" Curved Extrusion Support Leg 10A 11 12.184" Horizontal Extrusion **Counter Mounting Plate** 11A

Velcro on extrusions

Keep header

frame assembled, when packing.

10A

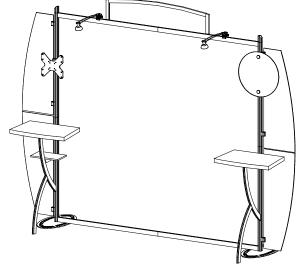

When assembled

* Monitor Mount Attachment

Connectors

Monitor Mount

Back




Slide V4 Connectors into groove of Extrusion. Tighten Set Screws to secure connectors in place.

Attach Monitor Mount back piece to Extrusion, using bolts.

Then slide monitor mount into back piece.






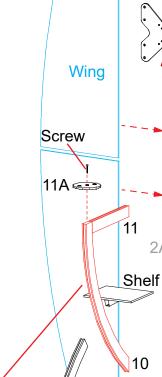


Wing

10A

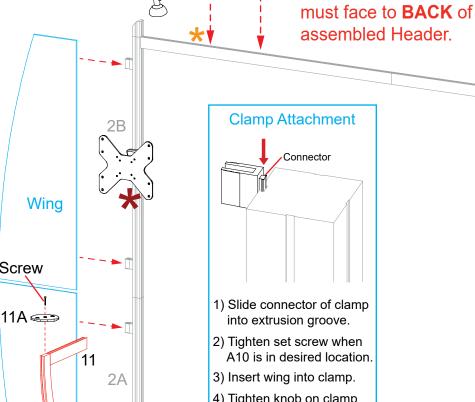

4) Tighten knob on clamp to secure wing in place.




Keep A10 clamps attached to verticals


FRONT VIEW

Clamp Graphic Wing Screw 11A 🖘 11

Wing

3A

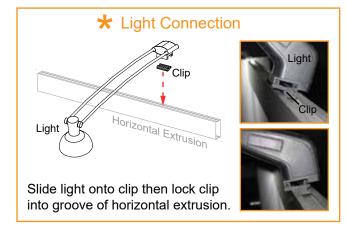

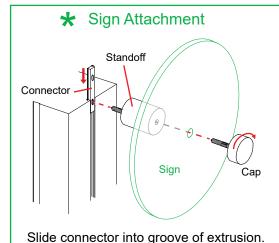

Tighten set screws to secure in place. Screw standoff into connector. Place sign between standoff and cap then tighten cap to secure sign.

Keep curved extrusion [10] & horizontal [11] assembled.